

BARBECUES : PLANCHA BF
FIGARI L - FIGARI L PLUS - L - LX
LX PLUS - OTHELLO 2X - XD



PLANCHA FIGARI L



PLANCHA FIGARI L PLUS



PLANCHA BF L



PLANCHA BF LX



PLANCHA BF LX+



OTHELLO 2X














PLANCHA BF XD

BARBECUES : PLANCHA BF
FIGARI L - FIGARI L PLUS - L - LX
LX PLUS - OTHELLO 2X - XD

FIGARI L / FIGARI L PLUS
L

LX / LX PLUS / XD
OTHELLO 2 X

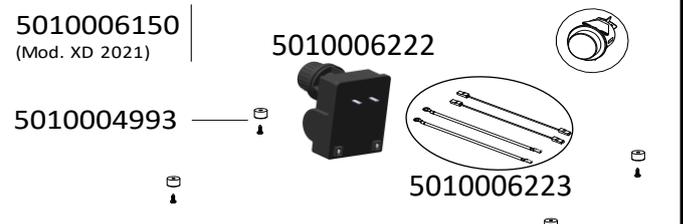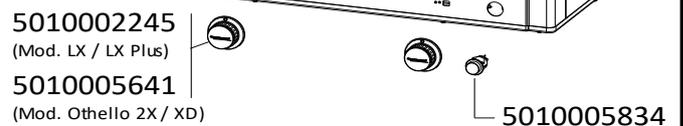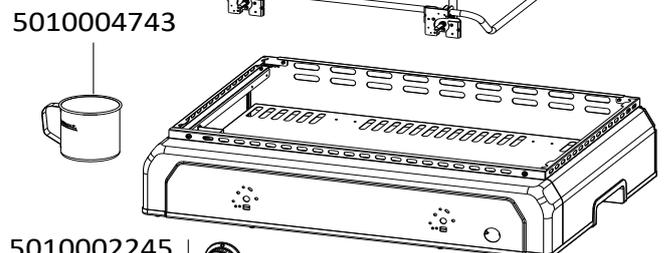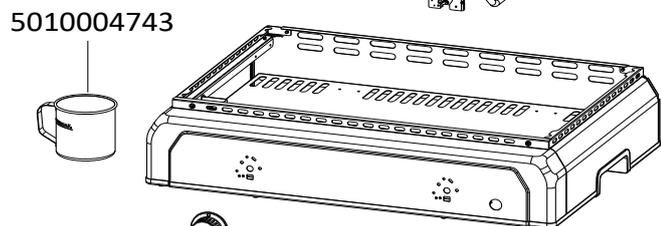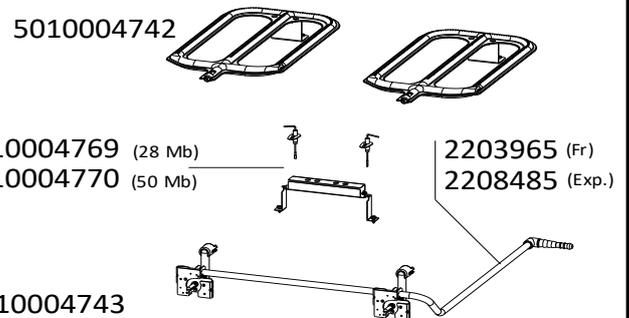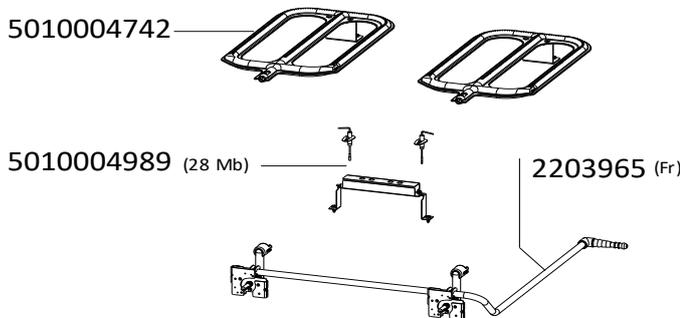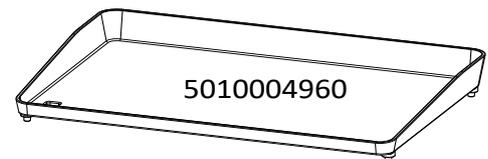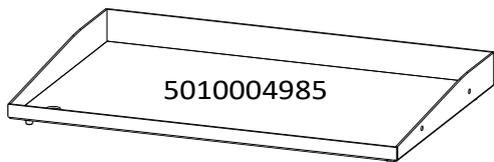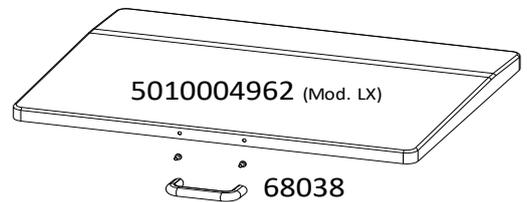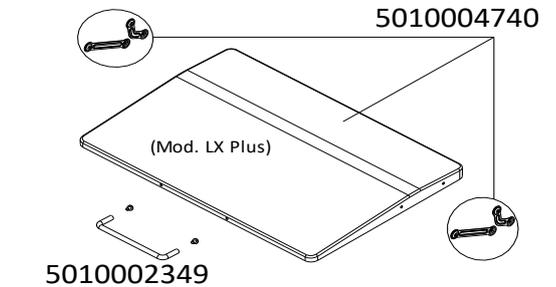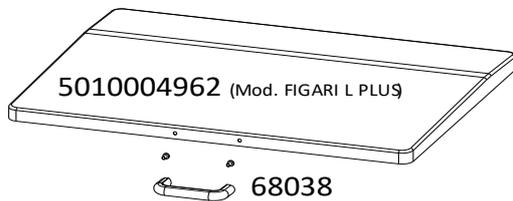

BARBECUES : PLANCHA BF
FIGARI L - FIGARI L PLUS - L - LX
LX PLUS - OTHELLO 2X - XD



SPARE PARTS REF.	EN DESCRIPTIONS	FR DESCRIPTIONS	PLANCHA FIGARI L PLANCHA FIGARI L PLUS	PLANCHA BF L	PLANCHA BF LX	PLANCHA BF LX PLUS	PLANCHA BF XD OTHELLO 2 X
68038	LID HANDLE + SCREWS	POIGNEE COUVERCLE + VIS	X		X		
2203965	GAS PIPE 28Mb G1/2 (Fr)	TUBULURE GAZ 28Mb G1/2 (Fr)	X	X	X		X
2208485	GAS PIPE 28Mb (Exp.)	TUBULURE GAZ 28Mb (Exp.)		X	X		
5010002245	CHROMED KNOB (x2)	VOLANT CHROME (x2)		X	X	X	
5010002349	LID HANDLE + SCREWS	POIGNEE COUVERCLE + VIS				X	
5010004740	LID (STAINLESS STEEL) WITH HANDLE AND CONNECTING RODS	COUVERCLE (INOX) AVEC POIGNEE ET BIELLETES				X	
5010004742	STAINLESS STEEL BURNER 28MB AND	BRULEUR INOX 28MB ET 50MB	X	X	X	X	X
5010004743	GREASE CAN	POT A GRAISSE	X	X	X	X	X
5010004769	ELECTRODES + HOUSING 28 Mb	ELECTRODES + SUPPORT 28 Mb			X		X
5010004770	ELECTRODES + HOUSING 50 Mb	ELECTRODES + SUPPORT 50 Mb		X	X	X	
5010004960	ENAMELLED CAST IRON COOKING GRIDDLE	PLAQUE DE CUISSON FONTE EMAILLEE			X	X	X
5010004962	LID WITHOUT HANDLE (DARK GREY) - SHINY	COUVERCLE SANS POIGNEE (GRIS FONCE) - BRILLANT	X		X		
5010004985	ENAMELLED STEEL COOKING GRIDDLE	PLAQUE DE CUISSON ACIER EMAILLE	X	X			
5010004989	ELECTRODES + HOUSING 28 Mb	ELECTRODES + SUPPORT 28 Mb	X	X			
5010004993	PLASTIC FEET (x4) + SCREWS	PIED PLASTIQUE (x4) + VIS	X	X	X	X	X
5010005365	PIEZO DOUBLE	PIEZO DOUBLE	X	X			
5010005641	LIGHT GREY KNOB (x3)	VOLANT GRIS CLAIR (x3)	X				X
5010005834	PUSH BUTTON ELECTRONIC IGNITOR (SILVER CAP)	BOUTON POUSSOIR TRAIN D'ETINCELLES (BOUTON ARGENTE)			X	X	X
5010006150	KNOB (X2) - BLACK	VOLANT (X2) - NOIR					X
5010006222	ELECTRONIC IGNITOR 2 OUTLETS (FOR MODEL WITHOUT SIDE BURNER)	BOITIER ALLUMAGE ELECTRONIQUE 2 SORTIES (POUR MODELE SANS RECHAUD LATERAL)			X	X	X
5010006223	WIRES FOR 2-4 OUTLETS ELECTRONIC IGNITORS	CABLES POUR BOITIER ALLUMAGE ELECTRONIQUE 2-4 SORTIES			X	X	X